

EUROCARD HOLDER

SKT 31

Screw terminals 31-pole (DIN 41617) all


The D2 size is for a card without a front plate.


To insert the card first press down the 2 yellow buttons. Then slide the Eurocard into the guide slots pushing until fully engaged. The card is now locked into position. It can be removed by pressing down on the 2 yellow buttons.

Link to Product

Illustration



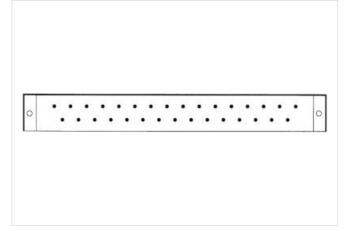

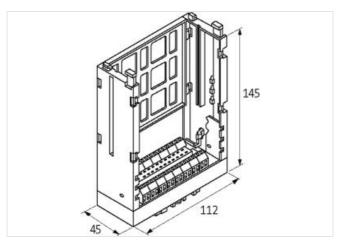

Product may differ from Image





Commercial data		
ECLASS-6.0	27260710	
ECLASS-6.1	27260704	
ECLASS-7.0	27440402	
ECLASS-8.0	27440402	

The information in this Product-PDF has been compiled with the utmost care.

Liability for the correctness completeness and topicality of the information is restricted to gross negligence. Version: 2024-05-05



ECLASS-9.0	27460201	
ECLASS-10.1	27440402	
ECLASS-11.1	27460201	
ECLASS-12.0	27460201	
ETIM-5.0	EC002780	
customs tariff number	85366990	
GTIN	4048879042024	
Packaging unit	1	
Electrical data Supply		
Operating voltage AC	250 V	
Operating current max.	5 A	
Installation		
Connection cross-section solid max.	4 mm²	
Installation Pin assignment		
No. of poles	31	
Device protection Electrical		
Overvoltage category (EN 60664-1)	I	
Device protection Media		
Flame resistance	flame retardant	
Mechanical data		
Type of socket connector	DIN 41617	
Mechanical data Material data		
Material housing	Plastic	
Mechanical data Mounting data		
Mounting method	screwed, geschnappt	
Suitable for mounting type	horizontal, vertical, mounting rail, (EN 60715)	
Height	112 mm	
Width	45 mm	
Depth	145 mm	