



EUROCARD HOLDER

SKP 48 pole/3-F(b+d+z)

To insert the card first press down the 2 yellow buttons. Then slide the Eurocard into the guide slots pushing until fully engaged. The card is now locked into position. It can be removed by pressing down on the 2 yellow buttons.

Link to Product

Illustration

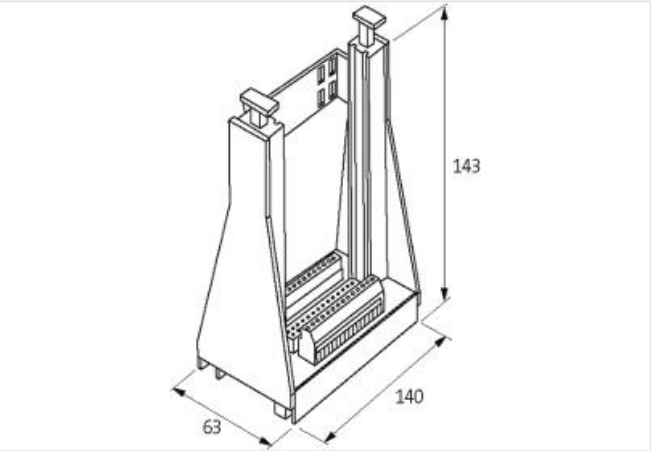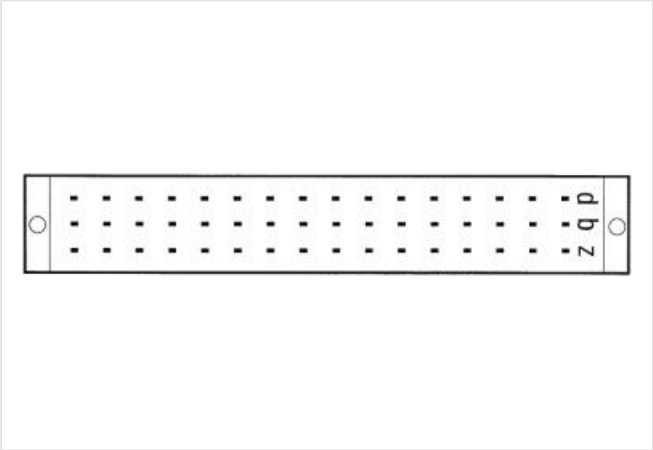

Product may differ from Image



Commercial data	
ECLASS-6.0	27260710
ECLASS-6.1	27260704
ECLASS-7.0	27440402
ECLASS-8.0	27440402
ECLASS-9.0	27440402
ECLASS-10.1	27440402
ECLASS-11.1	27460201
ECLASS-12.0	27460201

ETIM-5.0	EC002780
customs tariff number	85366990
GTIN	4048879038584
Packaging unit	1
<b>Electrical data   Supply</b>	
Operating voltage AC	250 V
Operating current max.	4 A
<b>Installation</b>	
Connection cross-section solid max.	4 mm <sup>2</sup>
<b>Device protection   Electrical</b>	
Overvoltage category (EN 60664-1)	I
<b>Device protection   Media</b>	
Flame resistance	flame retardant
<b>Mechanical data   Material data</b>	
Material housing	Plastic
<b>Mechanical data   Mounting data</b>	
Mounting method	screwed, geschnappt
Suitable for mounting type	mounting rail, (EN 60715)
Height	63 mm
Width	137 mm
Depth	170 mm